



SOP: How to change the keypad matrix type for Aspire 7720, Aspire 7520, Aspire 7320, Aspire 7220

1. Unzip the file "WinKBSel.zip" to a location that you prefer.
2. Open "WinKBSel1003.exe" which will launch the tool.
 - For all 17" models, please select "EX" and press OK
 - For 15.4" systems, please refer to the list below. Select the required option for your language, and press OK.

Language	Code	Language	Code	Language	Code
Arabic	US	Spanish	UK	HUngarian	UK
Belgium	UK	Sweden	UK	Hebrew	US
Brazilian-Portuguese	UK	Swiss/G	UK	Italian	UK
Canadian-French	UK	Thai	US	Norwegian	UK
Chinese	US	Thailand	US	Portuguese	UK
Czech	UK	Turkish	UK	Russian	US
Danish	UK	UK	UK	SLO/CRO	UK
French	UK	US-International	US		
German	UK	US-International-w/-Hebrew	UK		
Greek	US	US-w/-Canadian-French	UK		
Hungarian	UK	Japanese	JA		

